

GUGA  RIBAS
a better you

MANUAL



ENGLISH MANUAL

Adjusting the Holster for your gun

Keeping the tradition of fine design, quality, elegance, strength and durability of the previous models, Holster FSH is virtually universal, therefore suitable to most of today's pistols. To adjust the holster for your gun, visit <http://gugaribas.com.br/en/products-and-services/holster/> to watch the video on how to use the equipment aside with this manual. This will allow you to learn more about the product and adjust it with greater ease.

This product was developed specifically for use in high performance sports and should be regulated as described in this manual, respecting the safety rules of the IPSC, USPSA and any rule relating to the handling of firearms.

Adjustment is carried out in six steps and takes approximately 20 minutes. **To guarantee your safety, follow the step-by-step instructions to the letter.**

When adjusting this holster make sure you do it in a safe environment and that your gun is empty and unloaded. Your safety is your responsibility.

This manual can be accessed at:
<http://gugaribas.com.br/en/manuals>

STEP 0 – FITTING THE INSERT FOR GUNS WITH AN ASYMMETRICAL TRIGGER GUARD




0A



0B



0C

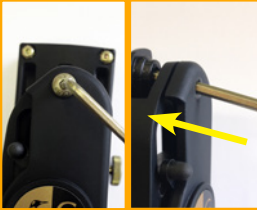

0D

In case your weapon's trigger guard (tg) is asymmetrical, as the HK is (photo 0A and 0B) replace the insert in the top part of both sides (photo 0C).

If your trigger guard is symmetrical and straight, you do not need to make this adjustment!

With the holster still closed, release the top screw (anti-clockwise) in the outer side (photo 0D). After removing the screw, use the Allen key to pull the original insert from the holster and remove it (photo 0E).

Next, take the insert for asymmetrical trigger guards, slot it in (photo 0F and 0G) and screw in the external screw (photo 0H).

For side B, first remove the handle to access the upper screw (photo 0I), repeat the steps described above and then move on to the next step (1).



Place insert for asymmetric tg



Press the insert to firm



Replace outer the screw

0H



0I



0J



0K



0L

0E Remove original insert

0E




01



02



03

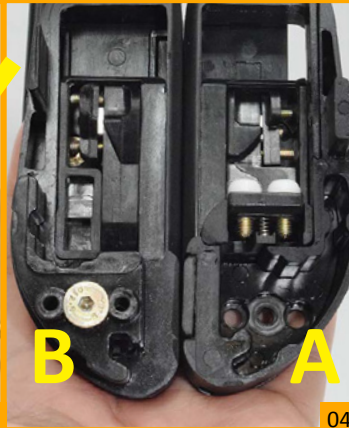

04

STEP 1 - OPENING THE HOLSTER

To begin the adjustment of your holster, you need to open it. To do this, remove the screws (photos 01 and 02) and then turn the central screw accessed in the gap between the two outer screws (photo 03) in an anti-clockwise direction until

the two parts separate.

ATTENTION! Do not remove the top screw near the lock lever (photo 01 and 02)

From now on, we will call the part with the "L" lock (or Passive lock) "A" and the part with the active lock "B", as per photo 04.



STEP 2 - ADJUSTING THE POSITION OF THE PASSIVE LOCK OR "L" LOCK (PART A)

With part A in your hand, slide the gun (photo 05) -imitating placing it in the holster- until the gun frame sits lightly on the upper part of the holster, as shown in photo 07.

You will adjust the position on the "L" lock with the gun in this position.





Activate the lock lever, putting it in lock mode (photo 08).



Looking at the inside, adjust the height of the “L” lock (photo 09) until the front of the trigger guard clicks into the lock gap (photo 10). The gun should not move in the vertical position.

To adjust the height of the “L” lock, turn the screw in the lower part of the “A” side in an anti-clockwise direction (photo 09) to rise the lock joint to the correct height.

Activate the lock lever, putting it in lock mode.



Correct adjustment:

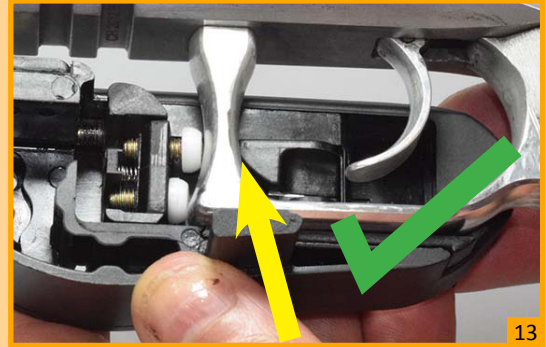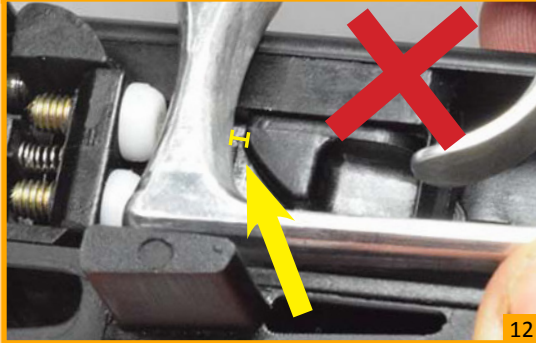

11. In this picture the top of the holster touches the frame, but the lock height is too low in relation to the trigger guard.

12. In this case the lock height is too high in relation to the trigger guard. We can see that the trigger guard is fitted, however there is a large gap between it and the lock.

13. This picture shows the correct positioning of the lock. We can see that the trigger guard is tight in the lock. A minimal gap here is necessary for the mechanism to work well.



STEP 3 - ADJUST THE FRONT PART OF THE TRIGGER


Keeping the arm fixed in "A", as in photo 13, check that the screws in the nylon head (photo 14) are touching the front of the trigger guard. If necessary, adjust them to the format of the trigger guard so that they sit together with it (photos 15 and 16).

STEP 4 - ADJUSTING THE WIDTH OF THE LOCK


Hold the “L” lock in place and work the adjusting screws through the window (photo 17). To adjust the width of the lock, you must loosen the two outer screws and then turn the middle screw in an anti-clockwise direction, so that the width of the lock increases (photos 18 and 19).

For this adjustment, the gun must be in the same position as the previous step (photo 20).


Repeat this process until it locks fits into the inner trigger guard when activated and rests neatly (without a gap and with light pressure) in the lower part.

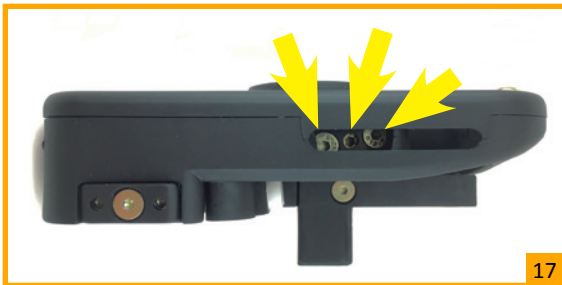

Upper view of the adjusting bolts in the “L” lock.

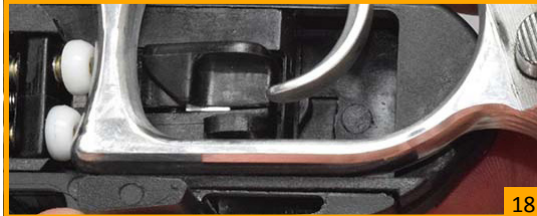

Front view of the “L” lock, showing the minimum length.
(Tests must be carried out with the gun inserted.)

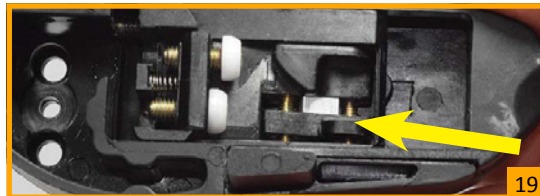


Front view of the “L” lock, showing increased length.




Right adjustment



Insufficient lock width (very narrow): the space between the trigger guard and the lock allows the gun to sit loosely.

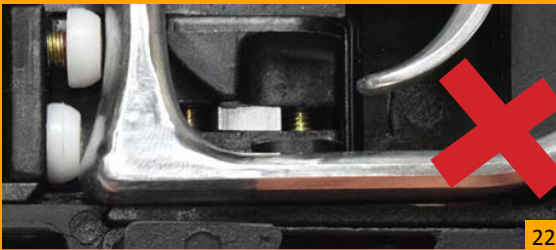

Exaggerated lock width (very wide): the lock does not enter the trigger guard so does not lock the gun into the holster.

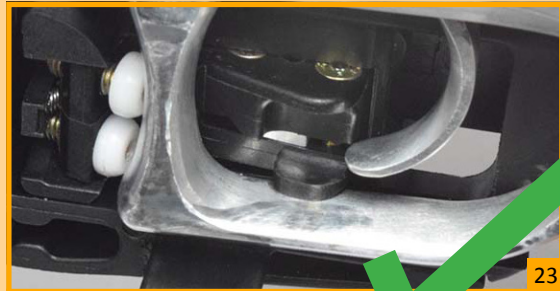

Appropriate width: the lock fits well in the trigger guard.



Extra adjustment:

If you find that there is still a significant gap between the lower part of the trigger guard and the holster (photo 25) the support shown in photo 26 must be changed.

With your holster you will have also received two pieces that are identical to the support which can already be found in the equipment but with a different thickness (photo 26).

For this, remove the screw indicated in the same photo; it is only visible when the "L" lock is adjusted in its lowest positions (photos 27 and 28).


In this case, although the height of the lock has already been adjusted, it will be necessary to lower it more, change the support and then re-adjust the right height once again.

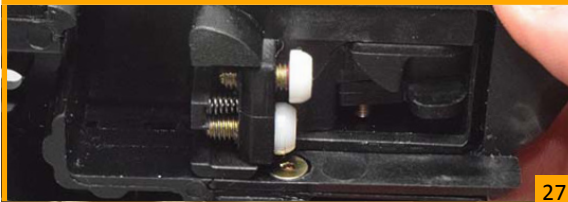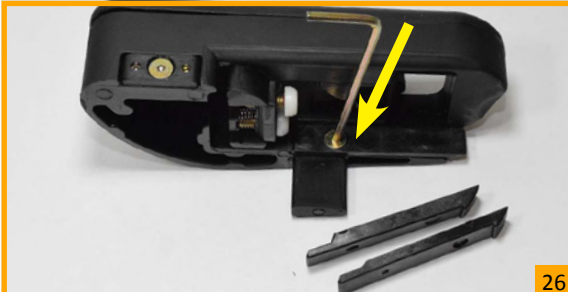


Verification

Once you have finished this adjustment, put the lock in the unlocked position, simulate the movement of placing the gun in the holster (photo 29) and check whether the lock is functioning correctly (photo 30).

The trigger guard should touch the Nylon head screws and the lock should enter the inside of the trigger guard, locking it into position.

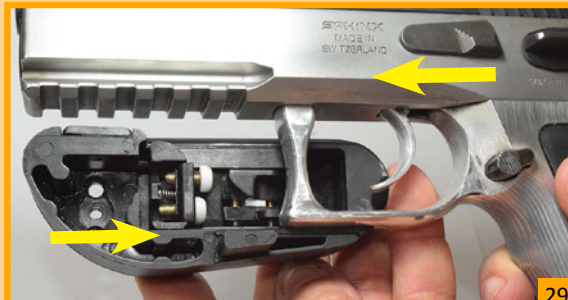

29

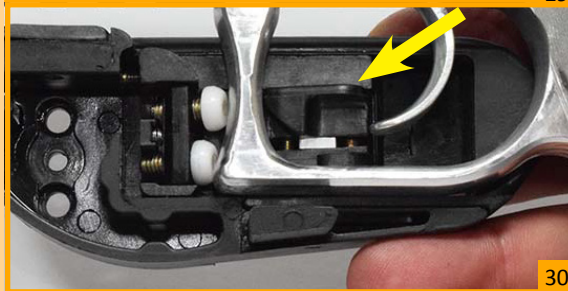

30

STEP 5- ADJUSTING THE ACTIVE LOCK (SIDE B)

Height: The height adjustment made on side A must be repeated on side B. As in side A, the adjustment of the height on the lock is done via the screw located on the bottom (photo 32), by turning it in anti-clockwise direction. The height of the locks should be the same on both sides (photos 33).

Width: The width adjustment of the lock made on side A must be repeated on side B. Compare them visually.

To access the adjusting screws for width on the active lock (side B), push the lock with your finger until the front of the holster opens (photos 34 and 35). As on side A, loosen the two external screws and then turn the middle one in an anti-clockwise direction, so that the width increases.



31

Left side(B) is yet not adjusted in keeping with the right(A).



32

Case height adjustment screw.



33

The height of the case on side B is correctly matched to that of side A. Next step: adjust the width.



34

To adjust the width of the lock on side B, press the lock.



35

With the lock pressed on side B, the adjustment screws appear.



36

Width of the lock and height of the case next to side B are adjusted to that of side A.

This should be done until the adjustment of side B is equal to that of side A. For guns with a rounded trigger guard, such as Taurus PT 101, 100, 99, 92, 89, 59, 58 pistols, the active lock (side B) may need to be narrower than the passive lock (side A).

STEP 6 - REASSEMBLING AND ADJUSTING THE WIDTH OF THE FRAME

The inner width adjusting screw should be tightly screwed into place (photo 37 and 38).

ATTENTION! Without this screw you won't be able to open your holster again. If you close your holster without the inner screw please contact out technical support at: productsupport@gugaribas.com

Re-fit the two sides, A and B (photo 39), taking care with so that both sides are adjusted (photo 40).





41

Replace the holster's external closing screws and continue tightening them alternately until the width of the holster is appropriate to the width of the frame of the gun (photo 41).

This width should be enough to allow the equipment to enter and be removed easily, but at the same time leave it tight in the holster.

Test the width placing your gun on the adjusted holster (photos 42 and 43)



42



43



44

The frame here is moving sideways inside the holster. It must be still.

Continue adjusting the two external screws until the frame is tight in the holster. Next, unscrew the internal screw using the middle hole until you meet resistance, thus finalizing the adjustment (photo 49).



45

FINE ADJUSTMENT:

Your holster has a frontal insert that allows fine adjustment, if necessary. To adjust it loosen the middle screw shown in photo 46, and with the 2mm Allen key access the screws through both lateral holes (photo 47) and in anti-clockwise motion unscrew them until the shim sits lightly in the frame (photo 48).

With your holster you received a higher shim. Use it if you judge necessary. For that exchange you have to substitute the shim lateral screws (photo 49) for the spare M3x8 screws.



Observation: It is important to take care when using this resource as a change in inclination of the gun in the holster could interfere with previous adjustments, thus affecting the adequate functioning of the holster.

Once everything is set, just make sure all the screws are fixed.



Congratulations

Your holster is now
ready to be used.



If you need any support with your
product please contact us at:
productsupport@gugaribas.com.br